

# Part List, Mechanical


Applicable for T39m and T39mc

**Contents**

<b>1</b>	<b>Exploded view.....</b>	<b>2</b>
1.1	T39m and T39mc .....	2
<b>2</b>	<b>Part list.....</b>	<b>3</b>
2.1	T39m and T39mc .....	3
<b>3</b>	<b>Revision History .....</b>	<b>4</b>

# 1 Exploded view

## 1.1 T39m and T39mc

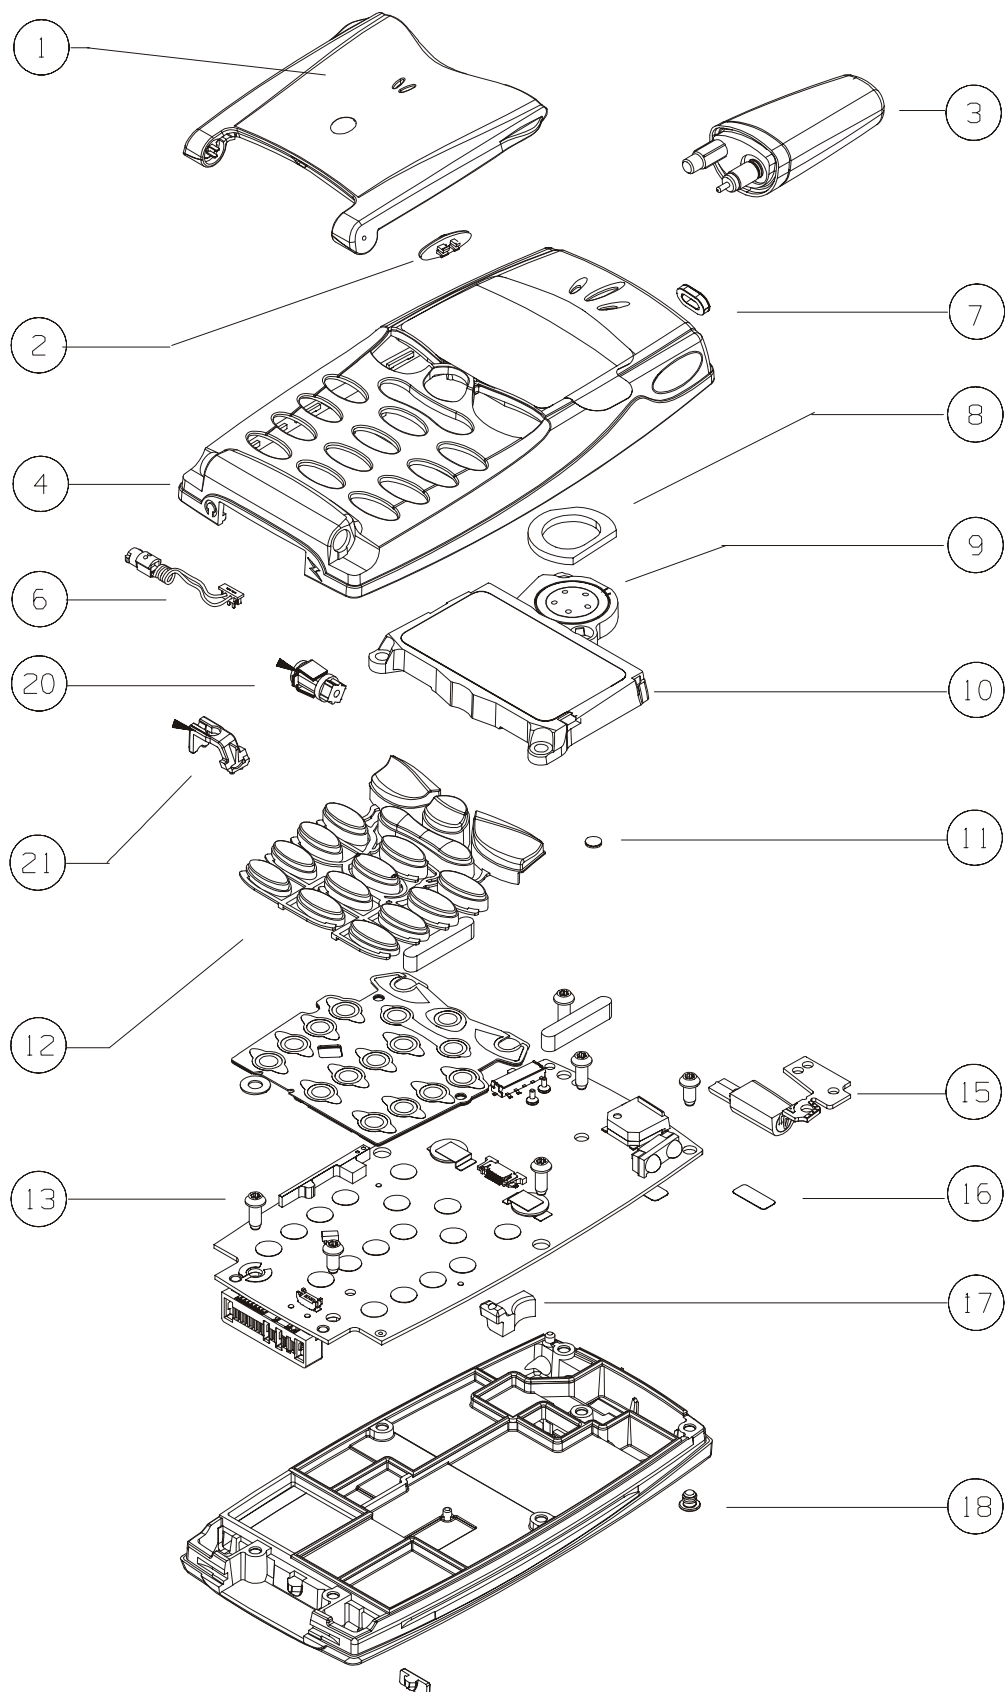

## 2 Part list

### 2.1 T39m and T39mc

- This Part List includes all parts possible to replace by using the Mechanical Repair Process. Parts available to order will be found in the Web Shop.  
Pos. number refers to the Exploded View.

Pos.	Description	Part Number	Comments
1	Flip, Blue	SXK 107 2280/2	
1	Flip, White	SXK 107 2280/3	
1	Flip, IceCap Blue	SXK 107 2280/4	
1	Flip, Blue, China	SXK 107 2280/22	
1	Flip, White, China	SXK 107 2280/23	
1	Flip, IceCap Blue, China	SXK 107 2280/24	
2	Volume button	SXA 104 2620/4	
3	Antenna, Blue	KRE 101 1096	
3	Antenna, White	KRE 101 1096/2	
3	Antenna, IceCap Blue	KRE 101 1096/3	
4	Front assembly, Blue	SXK 107 6917/2	
4	Front assembly, White	SXK 107 6917/3	
4	Front assembly, IceCap Blue	SXK 107 6917/4	
6	Cable assembly	SXK 107 6439	
7	Buzzer gasket	SXA 104 2629	
8	Speaker gasket	SXA 104 6894	
9	Speaker	RLE 906 23/1	
10	LCD assy.	SXK 107 7214/Z	
11	Speaker support	SXA 104 4498	
12	Keyboard, Latin	SXA 104 5689/7	
12	Keyboard, Chinese	SXA 104 5689/8	
12	Keyboard, Hebrew	SXA 104 5689/9	
12	Keyboard, Arabic	SXA 104 5689/10	
13	Screw	SXA 104 3498/2	
15	Vibrator assembly	SXK 107 6958	
16	Adhesive tape	SXA 104 5621	
17	Plug, rubber.	SXA 104 8324	
18	Plug, rubber (Clip)	SXA 104 6278	
20	Hinge	SXA 104 4590	
21	Hinge clamp	SXA 109 4200	
	Poron support pad	SXA 109 3035	Not shown in expl. view

### 3 Revision History

Rev.	Date	Changes / Comments
A	2001-05-09	
B	2001-05-15	Part number added for the Flips
C	2001-06-11	Part number changed for the flips and the Hinge Clamp
D	2001-08-30	Part number added for keyboard
E	2002-05-31	Poron support pad added